



# **Heat Not Burning Device Product Manual**

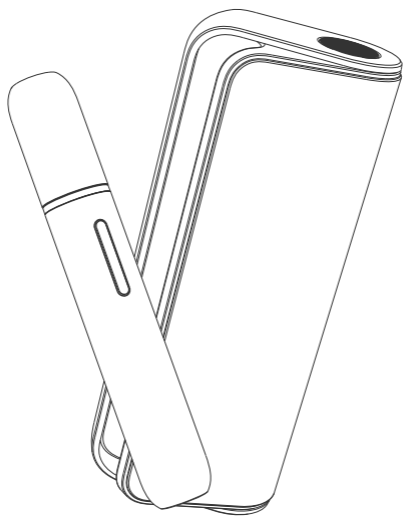


## Device Introduction

### Power Charging Case (Charging Box)

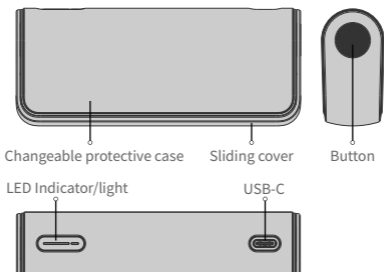


### Indicator




There are two groups of LED lights on the side of the Charging Box. LED of group A are used to indicate the charging status of the Charging Box; and the LED indicator of group B is used to indicate the charging status of the stick holder.

### Stick Holder

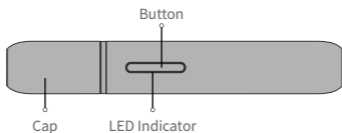


## Instructions for the First Use

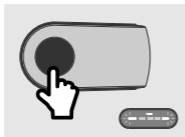

### Unlock the Device


Press and hold the button on top of the device for 5 seconds (child protection design), then release it. After the indicator gradually lights on slot by slot, the device will be in UNLOCK/POWER ON status.

In unlocked status, press and hold the button for 5 seconds, the indicators will light off one by one, both the Charging Box and the stick holder will be in LOCKED/POWER OFF status.

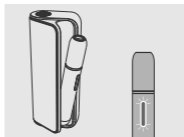

### Charge the Stick Holder


When the stick holder is put into the Charging Box to start charging, the white LED will begin to breathe and flash. When the battery is charged enough to smoke 2 cigarettes, the white indicator will turn into always-on, that is ready for use. If continue to charge it until full, the LED indicator will be off.

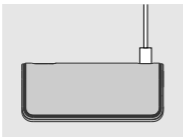

### Charge the Charging Box


Connect the USB power cable to the power adapter, and USB-C port on the side of the Charging Box to charge the Charging Box. When the Charging Box is fully charged, the LED lights will turn off.

## How to Use

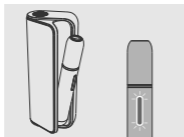

### 1. Take out the stick holder and check the battery level

Slide the side frame, open the Charging Box and take out the stick holder. Short press the button of stick holder, It can be seen that the LED indicator of the stick holder lights up. If the light flashes 2 times, you can smoke 2 cigarettes. If the light flashes 1 time, you can smoke 1 cigarette. And if the light flashes 5 times, the remaining power is not enough for smoking 1 cigarette.

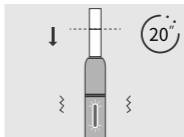

### 2. Insert a cigarette, and start pre-heating

Insert a stick from the top of the stick holder. Press the button for 2 seconds, the device vibrates once, and it starts to pre-heat.

During pre-heating, LED indicator breathes and flashes slowly. After 20 seconds, the device vibrates once and light keeps on, the pre-heating is finished. It is ready to smoke now.



### 3. Start to smoke, and a reminder before finished


When there are 2 puffs or 30 seconds left during smoking, the motor will vibrate once and LED will breathe and flash to remind you. The total heating time is 5 minutes, or the total puffs reaches 16 (whichever comes first), and then heating ends and LED light turns off.

Pressing the button for 2 seconds could manually stop the heating during the process.



### 5. Charge the stick holder

After using, place the stick holder back into the Charging Box for charging (the Charging Box is in unlocked status).

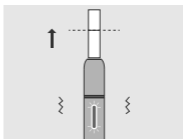

### 4. Finish smoking, and take out the stick

After finish smoking, rotate the used stick and pull it out.

The battery capacity of stick holder enables you to smoke 2 cigarettes.



### 6. Stick holder mode switching

Mode switching: the default white light is medium temperature, the stick holder in the hibernation (standby or full charge) state, press the stick holder button 5 times within 3 seconds, enter the three mode switching operation, at this time the motor vibrates once, LED breathing; Click the stick holder button, indicating green light enters low temperature, indicating white light enters medium temperature, indicating purple light enters high temperature ;if there is no button operation within 3 seconds, the mode switching state will automatically exit, the motor will vibrate once, and the LED will light off.

## Indication Description



### Check the battery level of Charging Box

In unlocked status, short press the button of the Charging Box, and the LED of group A will light up, indicating the remaining power level of the Charging Box:

1. If 4 slots light up for 3 seconds, the battery level is between 75%-100%
2. If 3 slots light up for 3 seconds, the battery level is between 50%-75%
3. If 2 slots light up for 3 seconds, the battery level is between 25%-50%
4. If 1 slot lights up for 3 seconds, the battery level is between 10%-25%
5. If 1 slot light flashes 10 times, and LED of group B flashes at the same time, the battery level is less than 10%




### Check the battery level of stick holder

If the stick holder is placed into the Charging Box and unlocked, short press the button of the Charging Box, and the LED of group B will light up, indicating the remaining power of the stick holder:


1. If the white light is always on, can smoke 2 cigarettes
2. If the white light breathes, can smoke 1 cigarette
3. If the blue light breathes, the remaining power is not enough for 1 cigarette.

You can check the battery level when the stick holder is taken out from charger. For more information, please see How to use "1.Take out the stick holder and check the battery level".

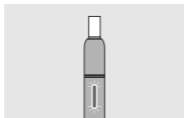

### Stick holder indicator

The stick holder indicator flashes 1 time to indicate that 1 stick can be smoked, and flashe 2 times to indicate that 2 sticks can be smoked

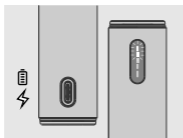

### Indication during charging of Charging Box

1. When the charging box is charging the stick holder, the LED of group B start to breathe and flash. After the stick holder is fully charged, the indicators will light off.
2. Charge the device by a USB charging cable, both indicators of group A and B may start to breathe and flash. After the stick holder is fully charged, the LED of group B will turn off. the indicators will be off after the power is fully charged.
3. The number of slots in group A that are always on, indicates the charging progress. After the charging box is fully charged, the indicators of group A will be off.



### Indication during charging of stick holder

The stick holder can only get charged when it placed into the Charging Box. In the charging process, the white LED breathes and flashes. When it charged enough to smoke 2 cigarettes, the white indicator turns into always-on, and could use it now. After the stick holder is fully charged, the LED light will turn off.



## Abnormal Status

1. The LED group A and the red light of LED group B of the Charging Box flash 8 times : When the surface temperature of the battery is higher than 60°C or lower than 0°C, the charging will be automatically disabled.
2. The red LED of the stick holder flashes 5 times, and vibrates once: During the heating or charging process, if the surface temperature of the battery is higher than 60°C or lower than 0°C, the heating or charging will automatically stop.
3. The red LED of the stick holder flashes 10 times, and vibrates once: During the heating process, if the heater is short-circuited or open-circuited, the device will automatically stop heating.
4. The white LED of the stick holder flashes 5 times and then turn off: The power is insufficient, the device starts the low power protection, and the heating is stopped.
5. Low voltage protection : when the charging box is lower than 3.05V, stick holder won't be charged, and charging box will no longer communicate to obtain the power of the stick holder, and the LED of group B will not indicate the power of stick holder, removing the stick holder after the low power of charging box will only prompt the low power of the charging box, the LED of A1 and the red LED of group B flash 10 times.
6. NTC protection : when the charging box is being charging , if the surface temperature of the battery cell is higher than 55 ° C or lower than 0 ° C, the charging box will automatically stop charging, the LED of A2 and the red LED of group B flash 8 times.



7. Short-circuit protection : When stick holder being charged in the charging box, if the 5V voltage output by the pin is short-circuited to the ground for 1 second, the charging box will stop charging, the LED of A3 and the red LED of group B flash 5 times.


8. Charging chip communication protection : If the MCU by writing the register of the charging chip and then read out the comparison is inconsistent, it will stop charging, the LED of A4 and the red LED of group B flash 3 times.

### **Other Notification**


1. If the stick holder is placed back into the Charging Box during the heating process, it will automatically stop heating.
2. If the stick holder is taken out from the Charging Box that is locked, it will remain locked. And needs to place the stick holder back into the Charging Box to unlock it.

## Cleaning


01. Prepare the cleaning brush

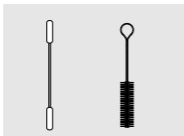


02. Remove the upper cover and rotate the airway tube

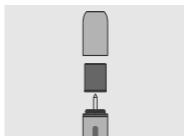


03. Clean the cap

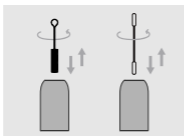

04. Clean the airway tube

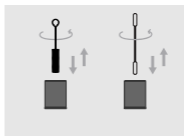

05. Cleaning the heating pin

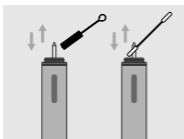

### Warning

- 1) At least wait 2-3 minutes to cool down the pin before cleaning.
- 2) Do not touch or wipe the surface of the heating pin with acid solution.

## Product Specifications

Model code: RP89Z

Battery type: Rechargeable lithium-ion battery

Input: AC power adapter 5V  $\approx$  2A;

Battery capacity of the Charging Box: 3,100 mAh

Battery capacity of the stick holder : 225mAh

Maximum puffs: 16  $\pm$  1

Maximum smoking time: 5 min  $\pm$  5 s (including the preheating time)

Working temperature: 0-45°C

## Product List

Device\*1

Manual \*1

USB-C cable\*1

Cleaning brush \*1

Cleaning swab \*5

## Safety Precautions

In order to avoid potential dangers, please read this safety precautions carefully before use. This safety precautions may not cover all possible situations, so please use the device very carefully. We have listed the important information in the Safety Precautions as follows. Please keep this manual for your reference at any time.

- This product is only suitable for adults aged 18 or above. For children, juvenile under 18, pregnant women, nursing mothers, and people with heart disease, high blood pressure, diabetes, asthma and epilepsy, or people who are allergic to nicotine, please DO NOT use this product.
- If you suffer from abdominal pain, chest pain, choking, cough, difficulty breathing, dizziness, headache, discomfort, nasal congestion, nausea, palpitations, or throat irritation when using this product, please STOP it immediately, and consult your doctor or healthcare expert.
- This product is only suitable for special Heat-not-burn sticks/consumables. Do not use other consumables to avoid damage to products or cause hazards.
- Keep the device away from children to avoid any danger.
- DO NOT use this product in the presence of flammable materials, liquids and gases, such as gas stations, chemical plants and other environments.
- This product is not waterproof, please do not wash it with water or place it in a moist environment.
- DO NOT disassemble this heater immediately after heating. DO NOT clean it before it is cooled to avoid burns.
- Do not touch or wipe the surface of the heater with acidic solution.

- If the surface is very hot during the charging or using , please stop using it immediately.
- Please DO NOT charge it overtime, please unplug the power cable in time after it is fully charged, otherwise it may affect the battery life or cause any danger.
- Keep the device off/locked when it is not in use, to avoid any potential risks.
- Please recycle the waste device according to the local environmental policy of classification and recycling requirements.
- During use, please DO NOT remove the cap of the stick holder to avoid burns.